



### Removal

---

- 1 Remove spare wheel enclosure.

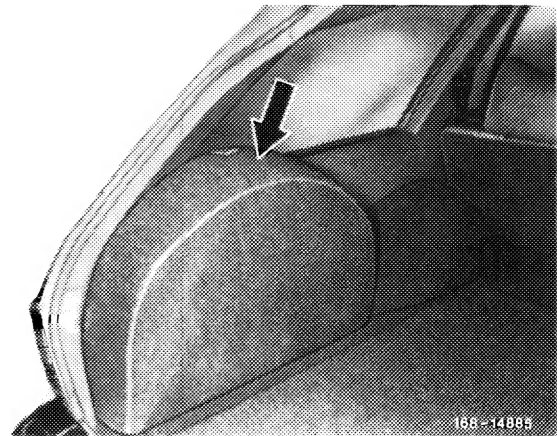

- 2 Unscrew fastening screw (top arrow).
- 3 Remove paneling from clips in range of rear center pillar and then slightly lift at rear end (bottom arrow) and remove.

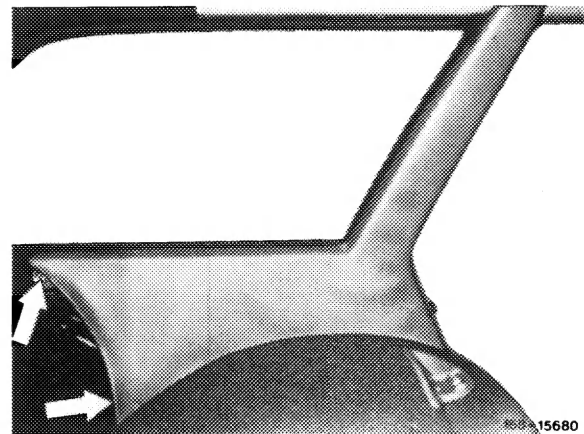

### Installation

---

- 4 Attach paneling by means of clips to rear center pillar and screw down.
- 5 Install spare wheel enclosure.

